



GTC4Lusso USA - Tow hook - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.16 Tow hook

Towing the vehicle




CAUTION

Always comply with road safety legislation when towing the vehicle.

Do not connect toe lines to suspension arms, suspension components or wheels. Connect only to the specific tow hook, after fitting the toe hook in its relative mounting.

Remember that the power steering and brake servo do not function with the engine off.

➤ Open the luggage compartment lid ( E5.09).

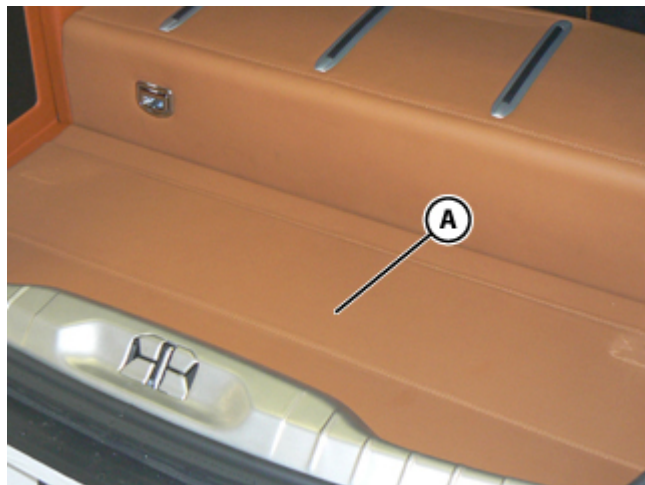

- Lift the luggage compartment floor trim **(A)** by pulling the indicated tab.



- Remove the tow hook from the tool bag.



- Screw the tow hook completely into the indicated seat.
- Do not use any part of the vehicle other than the specific tow point to tow the vehicle.

- Deactivate the Park Lock electronically (CAR WASH mode) (🔑 E5.10).
- Disable the EPB electric parking brake Autohold function (🔑 D3.06).
- Keep the electronic system of the vehicle in **Key-ON** state to enable the lights, prevent the steering wheel from locking if turned, keep the Park Lock deactivated and prevent activation of the EPB electric parking brake.